

Data sheet

Return temperature limiter FJV (PN 16)

Description



The FJV ensures that return water is cooled to required temperature before it flows back to the district heating plant. Controller closes on rising temperature.

The controller has a control valve, thermostatic actuator and handle for temperature setting. Thermostatic actuator consist of a bellows only.

For block and district heating systems.

Main data:

- DN 15, 20, 25
- k_{vs} 1.9, 3.4, 5.5 m³/h
- PN 16
- Setting range: 20 ... 60 °C
- Temperature:
 - Circulation water / glycolic water up to 30%: 2 ... 130 °C
- Connections:
 - Int. thread
 - Ext. thread (weld-on and ext. thread tailpieces)

FJV is self-acting temperature controller used to control:

- return water temperature from hot water tanks in direct connected district heating systems
- return water temperature in district heating systems with mixing loop.

Ordering

Example:
Return temperature limiter, DN 15,
 k_{vs} 1.9, PN 16, setting range
20...60°C, t_{max} 130°C, ext. thread

- 1x FJV DN 15 controller
Code No: **003N5117**

Option:

- 1x Weld-on tailpieces
Code No: **003H6908**

FJV Controller

| Picture | DN | Setting range (°C) | k_{vs} (m ³ /h) | Internal thread | | External thread | |
|---------|----|--------------------|------------------------------|--------------------|-----------------|----------------------|-----------------|
| | | | | Connection ISO 7/1 | Code No. | Connection ISO 228/1 | Code No. |
| | 15 | 20 ... 60 °C | 1.9 | R _p 1/2 | 003N2250 | G 3/4 A | 003N5117 |
| | 20 | | 3.4 | R _p 3/4 | 003N3250 | G 1 A | 003N5118 |
| | 25 | | 5.5 | R _p 1 | 003N4250 | G 1 1/4 A | 003N5119 |

Accessories

| Picture | Type designation | DN | Code No. |
|---------|----------------------------|----|------------------------|
| | Weld-on tailpieces | 15 | 003H6908 |
| | | 20 | 003H6909 |
| | | 25 | 003H6910 |
| | External thread tailpieces | 15 | R 1/2" 003H6902 |
| | | 20 | R 3/4" 003H6903 |
| | | 25 | R 1" 003H6904 |


Service kits

| Picture | Type designation | for | Code No. |
|---------|---|-------|-----------------|
| | Repair set Two diaphragms, two O-rings, one rubber cone, one tube of grease and eight valve cover screws | DN 15 | 003N4006 |
| | | DN 20 | 003N4007 |
| | | DN 25 | 003N4008 |
| | Thermostatic actuator 20 ... 60 °C | | 003N0084 |

Technical data


| Nominal diameter | DN | 15 | 20 | 25 |
|----------------------------|--|--|-----|-----|
| k_{vs} value | m ³ /h | 1.9 | 3.4 | 5.5 |
| Nominal pressure | PN | 16 | | |
| Max. differential pressure | bar | 10 | | |
| Medium | Circulation water / glycolic water up to 30% | | | |
| Medium pH | Min. 7, max. 10 | | | |
| Medium temperature | -25 ... +130 °C | | | |
| Materials | | | | |
| Valve body | internal thread | MS 58, hot-pressed, DIN 17660, W.No. 2.0401, CuZn40Pb3 | | |
| | external thread | Dezincing-free brass, BS 2872/CZ132 | | |
| Valve seat | Cr Ni steel, DIN 17440, W.No. 1.4301 | | | |
| Valve cone | NBR-rubber | | | |
| Spindle | Dezincing-free brass, BS 2874/CZ132 | | | |
| Diaphragms, O-rings | EPDM-rubber | | | |

Application principle

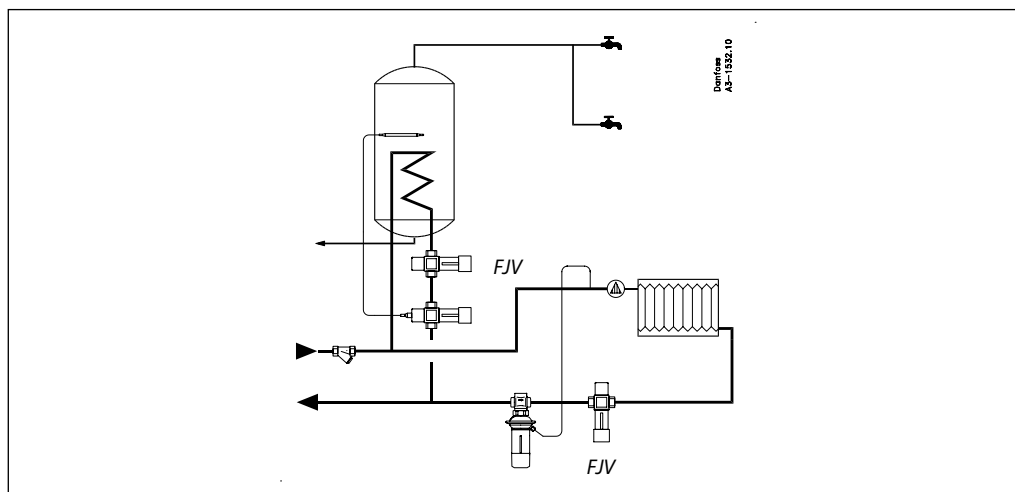

Installation positions

Temperature controller

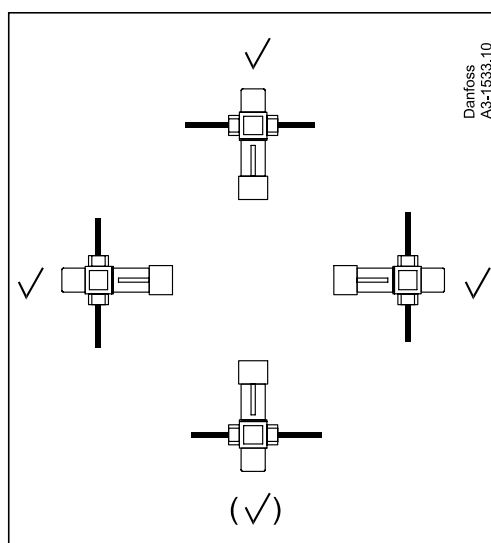

1. FJV must be installed immediately behind the hot water tank.
2. If central control of return water temperature is required (in district heating systems with mixing loop), FJV must be positioned so that return water temperature from hot water tank does not affect the element.


The controller must be installed in return line, as shown under "Application principle" section. It can be installed in any position, with flow in the direction of the cast-in arrow.

Pipe connection from system and tank to FJV must not be insulated because it must be allowed to give off heat.

Installation and service are described in detail in the instructions, which is supplied with the controller. Separate instructions are available.

Sizing

Capacity diagram, P band ~ 16 K.
Control capacity Q is given for different differential pressures Δp .

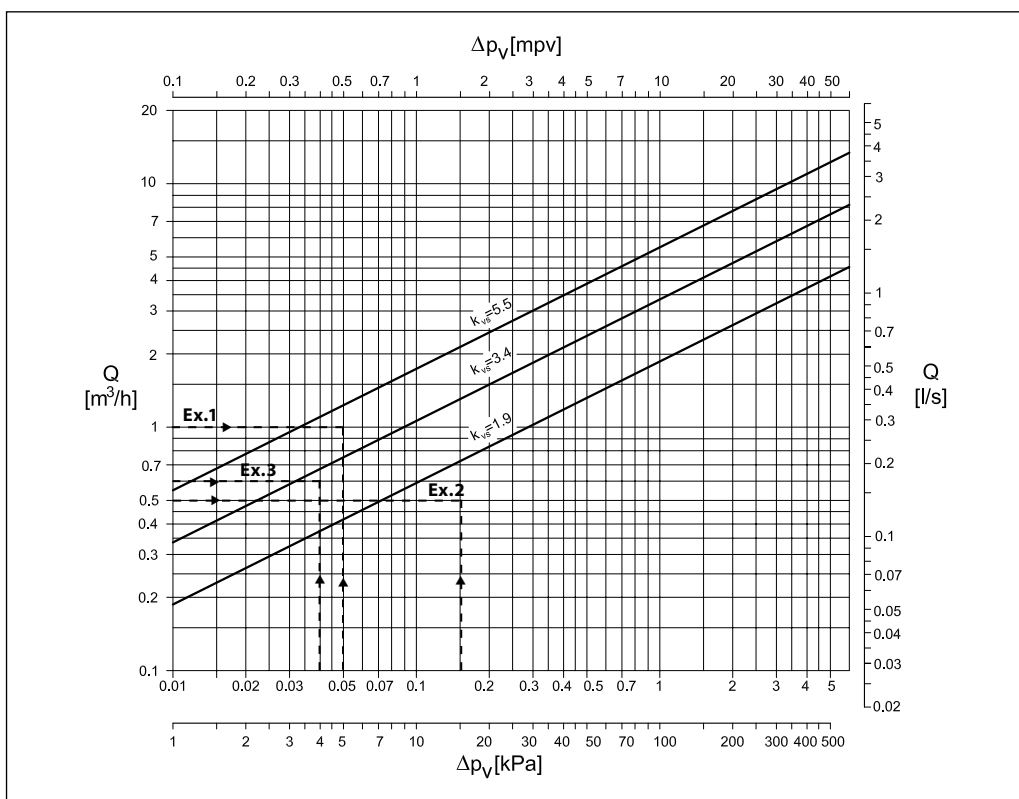

Example no. 1

Water volume : 1.0 m^3/h (0.28 l/s)
Differential pressure: 0.05 bar (0.5 mPv)
 $k_v = 4.5 \rightarrow k_{vs} = 5.5$
Valve selection: FJV 25

Example no. 2


Water volume: 0.5 m^3/h (0.14 l/s)
Differential pressure: 0.15 bar (1.5 mPv)
 $k_v = 1.3 \rightarrow k_{vs} = 1.9$
Valve selection: FJV 15

Example no. 3

Water volume: 0.6 m^3/h (0.17 l/s)
Differential pressure: 0.04 bar (0.4 mPv)
 $k_v = 3.0 \rightarrow k_{vs} = 3.4$
Valve selection: FJV 20

Design

1. Handle for temperature setting
2. Spring housing
3. Setting spring
4. Spindle guide
5. O-ring
6. Valve cover
7. Diaphragm
8. Valve cone
9. Bellows stop
10. Thermostatic actuator
11. Bellows

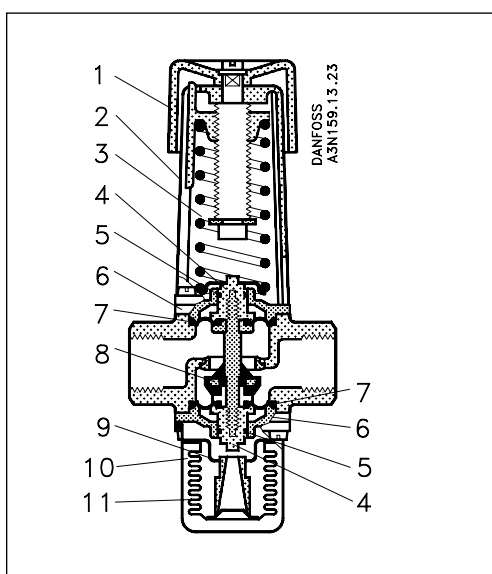


Settings


Temperature setting

FJV have numbered neutral scale. The drawing shows the relation between scale numbers and return water temperature.

Values given are indicative only.

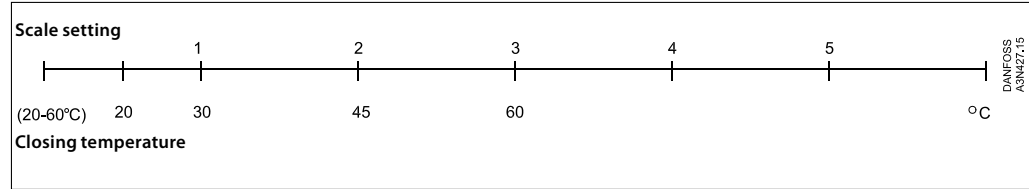

Dimensions

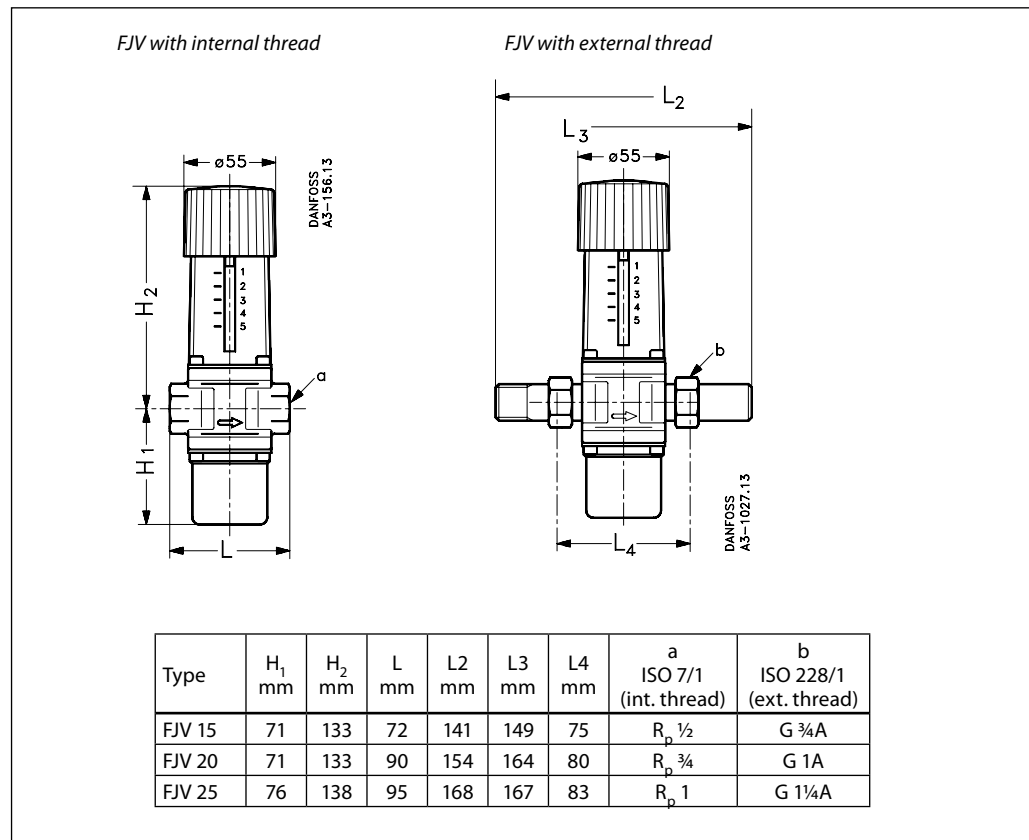

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.